


- 15255** AS-101K-5 = 120 Volt / 1/2-2 HP / 1 Phase
- 15255A** AS-101K-6 = 208-240 Volt / 1/2-2 HP / 1 Phase
- 15255B** AS-101K-7 = 208-240 Volt / 1/2-10 HP / 3 Phase
- 15255C** AS-101K-8 = 380-460 Volt / 1/2-10 HP / 3 Phase

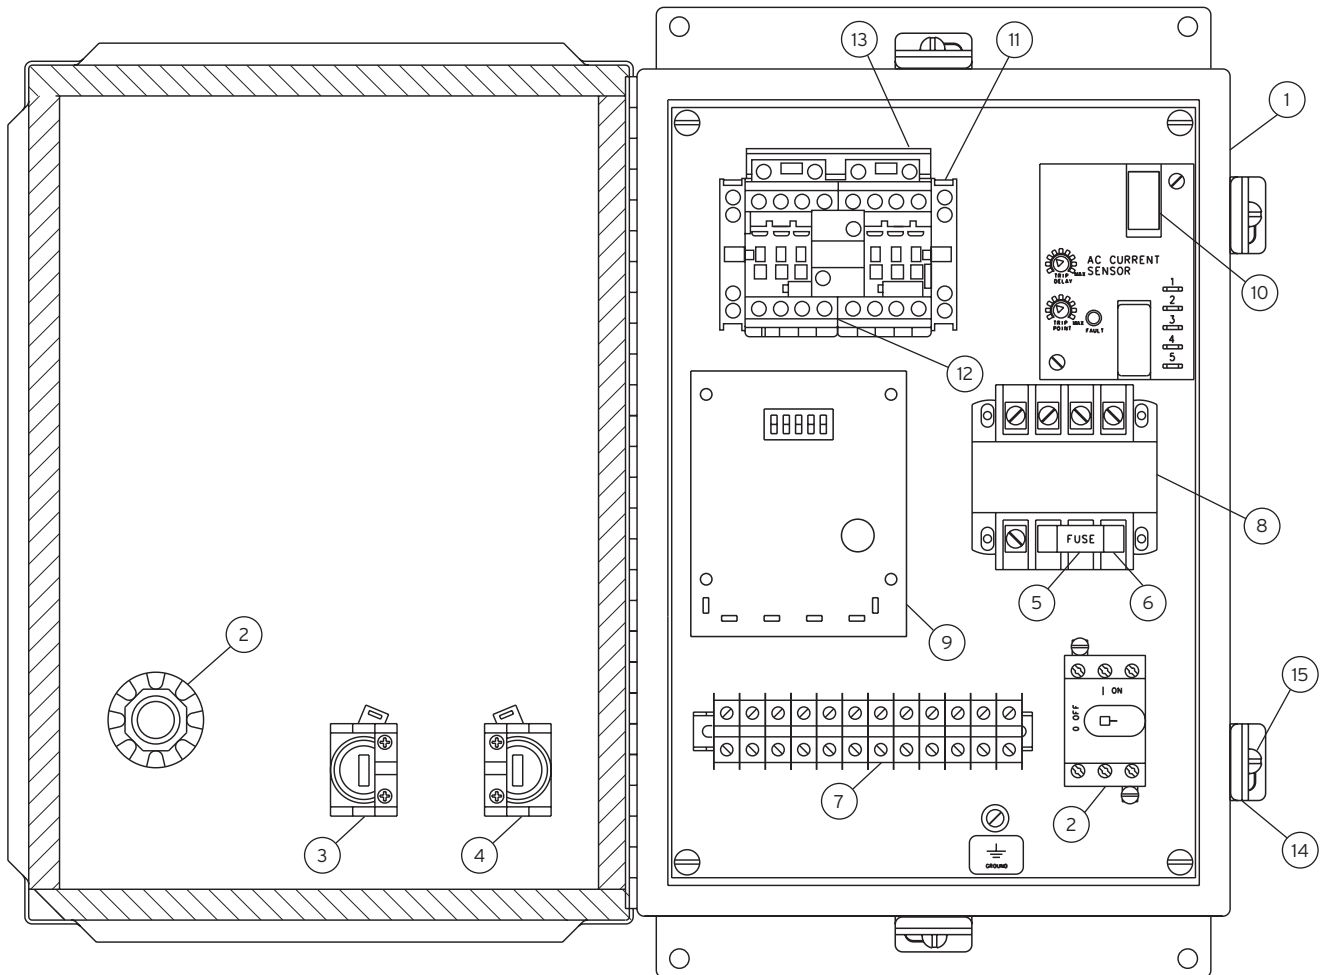

Order By Part Number, Not Code Number

CODE #	PART #	QTY	DESCRIPTION
1	N/A	1	Stainless Steel Enclosure
2	14728	1	Door Disconnect Kit
3	14158	1	Pushbutton Stop (N.C. Red)
4	14159	1	Pushbutton Start (N.O. Black)
5	13466	1	Fuse (2 Amp - 125 Volts) (FNA-2 or FNM-2)
6	14165	2	Fuse Holder
7	16191-ISE	1	Terminal Block Assy, 120V 1PH
	16191A-ISE	1	Terminal Block Assy, 220-240V 1PH
	16191B-ISE	2	Terminal Block Assy, 3PH
8	14185	1	3 Phase Transformer - 1 Phase
	14161	1	Circuit Board, Printed
9	14395		

CODE #	PART #	QTY	DESCRIPTION
10	13930	1	Current Sensor - 2-20 Amp (AS-101K-5)
	14413	1	Current Sensor - .5-10 Amp (AS-101K-6, 7 & 8)
11	14163	2	Auxiliary Contact Block (Used On 1 Phase Units Only)
12	15285	1	Interlock Set
13	15262	1	Reversing Contactor (AS-101K-5*)
	15263	1	Reversing Contactor (AS-101K-6*) *(Includes Code 6)
	15264	1	Reversing Contactor (AS-101K-7)
	15265	1	Reversing Contactor (AS-101K-8)
14	13935	4	Top Cover Retainer
15	13942	4	Screw
	13625	4	Tamperproof Screw (Not Shown)
	14494	2	Solenoid Valve - 24 Volt Coil (Not Shown)